



ACCUMATIC™ 200 (EH-6818)

OPERATING INSTRUCTIONS

ENTRIES	ANSWER		ENTRIES	ANSWERS
2 + 3 =	5		30 × 5 %	1.5
3 - 2 =	1		30 ÷ 5 %	600
2 × 3 =	6		30 + 5 %	31.5
4 =	12		30 - 5 %	28.5
6 ÷ 2 =	3	M ^{**} <input type="checkbox"/> MR MR	2 + 3 = M	5
4 =	2		4 - 3 = M	1
2 + 4 - 3 =	3		5 × 4 = M	20
4 × 6 ÷ 3 =	8		<input type="checkbox"/> MR	26
ENTRIES	ANSWERS		ENTRIES	ANSWERS
2 - 3 =	1	M ⁻ <input type="checkbox"/>	18 ÷ 3 = M	6
10 × 5 %	0.5		2 × 5 = M	10
12 %	0.6		<input type="checkbox"/> MR	20
10 ÷ 5 %	200		<input type="checkbox"/> MR	20
12 %	240		<input type="checkbox"/> MR	0
12 + 6 ÷ 3 =	6	<input type="checkbox"/> 2	100 ÷ 7 =	14.29
5 - 3 × 4 =	8	<input type="checkbox"/> F	100 ÷ 7 =	14.285714
8 ÷ 2 - 1 =	3			

Use only the AC adapter furnished with your calculator. To change batteries, slide the battery access cover on the rear of the calculator down. Remove and discard the old batteries. CAUTION!! TO PREVENT DAMAGE TO YOUR CALCULATOR, WHEN INSTALLING NEW BATTERIES OBSERVE THE BATTERY POLARITY MARKED INSIDE THE BATTERY COMPARTMENT.